

# LAYEREVALCTL system variable

1655 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1449

## Function Description:

The **LAYEREVALCTL** system variable is used to control the unreconciled new layer filter list for evaluating new layers in the layer properties manager.

**Type :** Integer

**Saved in :** User-settings

**Initial value :** 1

**Range :** 0,1

This system variable also controls whether to display new layer notify.

## System Variable Value:

**0** : disabled the new layer evaluating and notification

**1** : enable new layer evaluating by LAYEREVAL settings

Note: if specified the **LAYEREVALCTL** system variable to be 0, the settings of **LAYEREVAL** and **LAYERNOTIFY** will be ignored.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1655>