

# LAYERMANAGERSTATE system variable

1657 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 2472

## Function Description:

The **LAYERMANAGERSTATE** system variable is used to specify whether the layer property manager is on or off.

(Read-Only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : Unknown

**Range** : 0,1

## System Variable Value:

**0** : off

**1** : on

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1657>