

# LIGHTGLYPHDISPLAY system variable

1663 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 2218

## Function Description:

The **LIGHTGLYPHDISPLAY** system variable is used to control the display of light glyphs.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1

The light glyphs is symbols for point light and spotlight.

## System Variable Value:

**0** :off

**1** :on

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1663>