

LIMMIN system variable

1669 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 2008

Function Description:

The **LIMMIN** system variable is used to store the left-bottom corner grid limit in current space by world UCS.

Type : 2D points

Saved in : Drawing

Initial value : 0.0000,0.0000

The **LIMMIN** is read only when paper space is active and the paper background or printable area is displayed.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1669>