

# LISPINIT system variable

1670 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 2544

## Function Description:

The **LISPINIT** system variable is used to specify whether retaining LISP function and variable when opening a new drawing in single file interface.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** : save LISP function and variables into every drawing.

**1** :LISP function and variable are valid in current drawing task only.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1670>