

## LOCALROOTPREFIX system variable

1672 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 2360

### Function Description:

The **LOCALROOTPREFIX** system variable is used to store the full path to the root folder where local customizable files installed.

(Read-Only)

**Type** : Strings

**Saved in** : Registry

**Initial value** : Unknown

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1672>