LOFTANG2 system variable

1675 GstarCAD MY /KW July 19, 2021 System Variables 0 2032

Function Description:

The **LOFTANG2** system variable is used to set the draft angle through the last cross section in the loft operation.

Type: Real

Saved in : Drawing Initial value : 90 Range : 0 ~ 360

The 0 direction is measured outward from the curve on the plane of the curve. The positive direction is measured toward the next cross section.

Online URL: https://www.kb2.gstarcad.com.my/article.php?id=1675