

# LOFTMAG1 system variable

1676 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 2215

## Function Description:

The **LOFTMAG1** system variable is used to set the amplitude of draft angle through the first cross section in the loft operation.

**Type :** Real

**Saved in :** Drawing

**Initial value :** 0.0000

This system variable could control how fast the surface starts bending toward the next cross section

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1676>