

## LOFTMAG2 system variable

1677 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 2495

### Function Description:

The **LOFTMAG2** system variable is used to set the amplitude of draft angle through the last cross section in the loft operation.

**Type :** Real

**Saved in :** Drawing

**Initial value :** 0.0000

This system variable could control how fast the surface starts bending toward the next cross section.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1677>