

LONGITUDE system variable

1684 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 2082

Function Description:

The **LONGITUDE** system variable is used to specify the longitude of geographic marker.

Type : Real

Saved in : Drawing

Initial value : -122.394

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1684>