

## LONGITUDE system variable

1684 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 2179

### Function Description:

The **LONGITUDE** system variable is used to specify the longitude of geographic marker.

**Type** : Real

**Saved in** : Drawing

**Initial value** : -122.394

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1684>