LUPREC system variable

1687 GstarCAD MY /KW July 21, 2021 System Variables 0 2030

Function Description:

The LUPREC system variable is used to set display precious for linear units and coordinates.

Type: Integer

Saved in : Drawing Initial value : 4 Range : 0 ~ 8

No matter how to set the display precious, the value for distance, area, and volume and linear coordinate internal precious are always maintained. The **LUPREC** does not have effect on dimension text. The dimension text is controlled by **DIMDEC** system variable and saved together with dimension styles.

Online URL: https://www.kb2.gstarcad.com.my/article.php?id=1687