

LWUNITS system variable

1690 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 2197

Function Description:

The **LWUNITS** system variable is used to control to display lineweight by inches or millimeters.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : inches

1 : millimeters

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1690>