

## MAGFADE system variable

1692 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 2125

### Function Description:

The **MAGFADE** system variable is used to control the transparency of magnifier.

**Type** : Integer

**Saved in** : Users-settings

**Initial value** : 30

**Range** : 1-100

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1692>