

## MAGSIZE system variable

1693 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 2296

### Function Description:

The **MAGSIZE** system variable is used to specify the size of magnifier.

**Type** : Integer

**Saved in** : Users-settings

**Initial value** : 128

**Range** : 64-256

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1693>