

MAGSIZE system variable

1693 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 2390

Function Description:

The **MAGSIZE** system variable is used to specify the size of magnifier.

Type : Integer

Saved in : Users-settings

Initial value : 128

Range : 64-256

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1693>