

# MATSTATE system variable

1696 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 2026

## Function Description:

The **MATSTATE** system variable is used to specify whether the material editor is turned on or off.  
(Read-Only)

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1

## System Variable Value:

**0** : off

**1** : on

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1696>