

MENUBAR system variable

1702 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 2241

Function Description:

The **MENUBAR** system variable is used to control the display of menu bar.

Range : 0,1

System Variable Value:

0 : do not display menu bar

1 : display menu bar

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1702>