

# MIRRTEXT system variable

1707 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 2430

## Function Description:

The **MIRRTEXT** system variable is used to control how **MIRROR** reflects text.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** : keep the same direction with text

**1** : mirror text direction

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1707>