

# MODEMACRO system variable

1708 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 2699

## Function Description:

The **MODEMACRO** system variable is used to display text strings in status bar, such as current drawing name, time/data stamp or special modes.

**Type :** Strings

**Saved in :** Not saved

**Initial value :** ""

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1708>