

# NORTHDIRECTION system variable

1717 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 1255

## Function Description:

The **NORTHDIRECTION** system variable is used to specify the angle between the Y axis of WCS and north of grid.

Type : Real

Saved in : Drawing

Initial value : 0.0000

This system variable is not affected by **AUNITS** and **AUPREC**.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1717>