

# OFFSETDIST system variable

1723 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 2164

## Function Description:

The **OFFSETDIST** system variable is used to specify the value of default offset distance.

**Type** : Real

**Saved in** : Not saved

**Initial value** : -1.0000

## System Variable Value:

$< 0$  : offset objects by specifying point

$\geq 0$  : set default offset distance

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1723>