

OFFSETDIST system variable

1723 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 2266

Function Description:

The **OFFSETDIST** system variable is used to specify the value of default offset distance.

Type : Real

Saved in : Not saved

Initial value : -1.0000

System Variable Value:

< 0 : offset objects by specifying point

≥ 0 : set default offset distance

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1723>