

# PDFFRAME system variable

1735 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 2323

## Function Description:

The **PDFFRAME** system variable is used to determine whether the PDF lay frame is visible.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1,2

## System Variable Value:

**0** : do not display and plot PDF underlay frame

Temporarily display the frame when previewing selection or selecting objects

**1** : display and plot PDF underlay frames

**2** : display but do not plot PDF underlay frame

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1735>