

## PDSIZE system variable

1738 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 2166

### Function Description:

The **PDSIZE** system variable is used to set the display size of point objects.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

### System Variable Value:

**0** : create points at 5 percent of the drawing area height

**>0** : specify the absolutely size

**<0** : specify a percentage of viewport size

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1738>