

PICKFIRST system variable

1747 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 2257

Function Description:

The **PICKFIRST** system variable is used to control whether need to select objects before starting the command.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : off. Only select objects after starting the command.

1 : on. Users could also select objects before starting the command.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1747>