

PLATFORM system variable

1750 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 2497

Function Description:

The **PLATFORM** system variable is used to specify the operation system in use.
(Read-Only)

Type : Strings

Saved in : Not saved

Initial value : Unknown

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1750>