

# PLOTOFFSET system variable

1754 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 2337

## Function Description:

The **PLOTOFFSET** system variable is used to control whether the plot offset is relative to printable area or edges of papers.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** : the plot offset is relative to printable area

**1** : the plot offset is relative to edges of papers

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1754>