

QCSTATE system variable

1785 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 2189

Function Description:

The **QCSTATE** system variable is used to specify whether the quick calculation is on or off.
(Read-Only)

Type : Integer

Saved in : Drawing

Initial value : Unknown

Range : 0,1

System Variable Value:

0 : off

1 : on

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1785>