

## QTEXTMODE system variable

1786 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 2340

### Function Description:

The **QTEXTMODE** system variable is used to control how to display text.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

### System Variable Value:

**0** : turn off quick text mode and display characters

**1** : turn on quick text mode and display text frame instead of text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1786>