RECOVERYMODE system variable

1789 GstarCAD MY /KW July 26, 2021 System Variables 0 2147

Function Description:

The **RECOVERYMODE** system variable is used to control whether to record drawing recovery information after a system failure.

Type: Integer Saved in: Registry Initial value: 2 Range: 0,1,2

System Variable Value:

0: do not record recovery information. Do not display "Drawing recovery" window automatically after a system failure and delete all recovery information in system register.

1 : record recovery information. Do not display "Drawing recovery" window automatically after a system failure.

2 : record recovery information. Display "Drawing recovery" window in next task automatically after a system failure.

Online URL: https://www.kb2.gstarcad.com.my/article.php?id=1789