

# RE-INIT system variable

1792 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 2541

## Function Description:

The **RE-INIT** system variable is used to reinitialize the digitizer, digitizer port and gcad.pgp file.

**Type** : Bitcode

**Saved in** : Not saved

**Initial value** : 0

**Range** : 1,4,16

## System Variable Value:

**1** : reinitialize the I/O port of digitizer

**4** : reinitialize the digitizer

**16** : reinitialize PGP file(reload)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1792>