

ROAMBLEROOTPREFIX system variable

1794 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 2408

Function Description:

The **ROAMBLEROOTPREFIX** system variable is used to store the complete path for root folders, in which installed files that can be roamed and customized.

(Read-Only)

Type : Strings

Saved in : Registry

Initial value : Unknown

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1794>