

# SHADOWPLANELOCATION system variable

1812 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 2278

## Function Description:

The **SHADOWPLANELOCATION** system variable is used to control the location of an invisible ground plane used to display shadows.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

The **SHADOWPLANELOCATION** value is current location on Z axis. The ground plane is invisible, but it could project and receive shadows. Objects under ground plane could project shadows by ground plane.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1812>