

SKETCHINC system variable

1818 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 2181

Function Description:

The **SKETCHINC** system variable is used to set the record increment for **SKETCH** command.

Type : Integer

Saved in : Drawing

Initial value : 0.1000 (Imperial) or 1.0000 (Metric)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1818>