

# SMOOTHMESHMAXLEV system variable

1824 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 2096

## Function Description:

The **SMOOTHMESHMAXLEV** system variable is used to set the maximum level of smoothness of mesh objects.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 4

**Range** : 1 ~ 255 1 ~ 5(recommended)

The extremely high density meshes might affect program performance, so they will be forbidden to create by this system variable.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1824>