

# SNAPSTYL system variable

1828 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 2701

## Function Description:

The **SNAPSTYL** system variable is used to set grid and grid snap to rectangular or isometric for current viewport.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** : rectangular

**1** : isometric

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1828>