

SSMSTATE system variable

1841 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 2331

Function Description:

The **SSMSTATE** system variable is used to control the state of Sheet Set Manager window is open or closed.

(Read only)

Type : Integer

Saved in : Not saved

Initial value :Unknown

Range : 0,1

System Variable Value:

0 :closed

1 : open

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1841>