## STANDARDSVIOLATION system variable

1842 GstarCAD MY /KW July 27, 2021 System Variables 0 1588

## **Function Description:**

The **STANDARDSVIOLATION** system variable is used to control whether to notify standard violation in current drawing when creating or modifying non-standard objects.

Type: Integer Saved in: Registry Initial value: 2 Range: 0,1,2

The modification of this system variable will have effect when checked Display Icons from Services in the Tray Settings dialog box.

## **System Variable Value:**

0 : close notifications

1: display notifications when standards violation occurred in a drawing

2 :display icons in Tray in status bar when opening a drawing associated with standard, or creating or modifying non-standard objects

Online URL: <a href="https://www.kb2.gstarcad.com.my/article.php?id=1842">https://www.kb2.gstarcad.com.my/article.php?id=1842</a>