

# SURFACEASSOCIATIVITYDRAG system variable

1847 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1708

## Function Description:

The **SURFACEASSOCIATIVITYDRAG** system variable is used to set the dragging preview behavior of associated surfaces.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1,2

This system variable could control the surface preview method of surfaces or all associated surfaces when dragging a selected surface. Disabling preview could enhance performance.

## System Variable Value:

**0** : do not display preview. It will refresh after dragging.

**1** : only preview the first associated surface dragging. All other associated surface will not move after dragging.

**2** : preview all associated surfaces dragging.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1847>