

# SURFTAB2 system variable

1850 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 2057

## Function Description:

The **SURFTAB2** system variable is used to set the mesh density in N direction for REVSURF command.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 6

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1850>