

SURFU system variable

1852 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 2324

Function Description:

The **SURFU** system variable is used to set the surface density in M direction for PEDIT Smooth option and the U isolines density on surface objects.

Type : Integer

Saved in : Drawing

Initial value : 6

Range : 0 ~ 200

Meshes are always created with the smallest density of 2.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1852>