

# SURFV system variable

1853 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 2515

## Function Description:

The **SURFV** system variable is used to set the surface density in N direction for PEDIT Smooth option and the V isolines density on surface objects.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 6

**Range** : 0 ~ 200

Meshes are always created with the smallest density of 2.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1853>