

# TABLEINDICATOR system variable

1855 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 2199

## Function Description:

The **TABLEINDICATOR** system variable is used to control the display of row number and column letter when opening in-place text editor to edit table units.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

## System Variable Value:

**0** : off

**1** : on

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1855>