

# TARGET system variable

1858 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 2313

## Function Description:

The **TARGET** system variable is used to store the target UCS coordinates for perspective projection in current viewport.

(Read-Only)

**Type** : 3D point

**Saved in** : Drawing

**Initial value** : 0.0000,0.0000,0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1858>