

TDUSRTIMER system variable

1864 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 2563

Function Description:

The **TDUSRTIMER** system variable is used to store the user-elapsed timer.
(Read-Only)

Type : Real

Saved in : Drawing

Initial value : Unknown

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1864>