

## TDUUPDATE system variabl

1865 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1887

### Function Description:

The **TDUUPDATE** system variable is used to store the last update or saved world standard time and date.

(Read-Only)

**Type** : Integer

**Saved in** : Drawing

**Initial value** : Unknown

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1865>