

TDUUPDATE system variabl

1865 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 2006

Function Description:

The **TDUUPDATE** system variable is used to store the last update or saved world standard time and date.

(Read-Only)

Type : Integer

Saved in : Drawing

Initial value : Unknown

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1865>