

# TEXTQLTY system variable

1872 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 2314

## Function Description:

The **TEXTQLTY** system variable is used to set the resolutions of true type text when plotting and rendering.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 50

**Range** : 0 ~ 100

A smaller value will decrease text smoothness, but it could increase speed.

A larger value could increase text smoothness, but it could decrease speed.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1872>