

## TEXTSIZE system variable

1873 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 2298

### Function Description:

The **TEXTSIZE** system variable is used to set the default text height for new created text objects.

**Type** : Real

**Saved in** : Drawing

**Initial value** : Real 0.2000 (Imperial) or 2.5000 (Metric)

The **TEXTSIZE** will be not available if there is a fixed text height in current text style.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1873>